Section 12 - Parts List

Contents

PL14.1 Offset Catch Tray I 12-2
PL14.2 Offset Catch Tray II 12-4

Using the Parts List

1. The numbers shown in each illustration correspond to the parts list number for that illustration.
2. Throughout this manual, parts are identified by the prefix “PL”, followed by a number, a decimal point, and another number. For example, PL3.1.12 means the part is item 12 of parts list 3.1.
3. The capital letters “C”, “E”, and “S” shown in an illustration stand for C-ring, E-ring, and Screw, respectively.
4. A shaded triangle t in an illustration indicates the item is part of an assembly.
5. The notation “with X~Y” following an part name indicates an assembly that is made up of components X through Y. For example, “1 (with 2~4)” means part 1 consists of part 2, part 3, and part 4.
6. The notation "RS" means that the part is a requested spare. Part numbers for these parts will be provided as soon as they are available.
7. An asterisk * following a part name indicates the page contains a note about this part.
8. The notation “J1<>J2 and P2” is attached to a wire harness. It indicates that connector jack 1 is attached to one end of the wire harness and connector jack 2 is attached to the other end that is plugged into plug 2.
9. A notation "(part of item 1.1)" indicates that the part is included with item 1.2.1 (PL1.2, line item 1).

PL14.1 Offset Catch Tray I

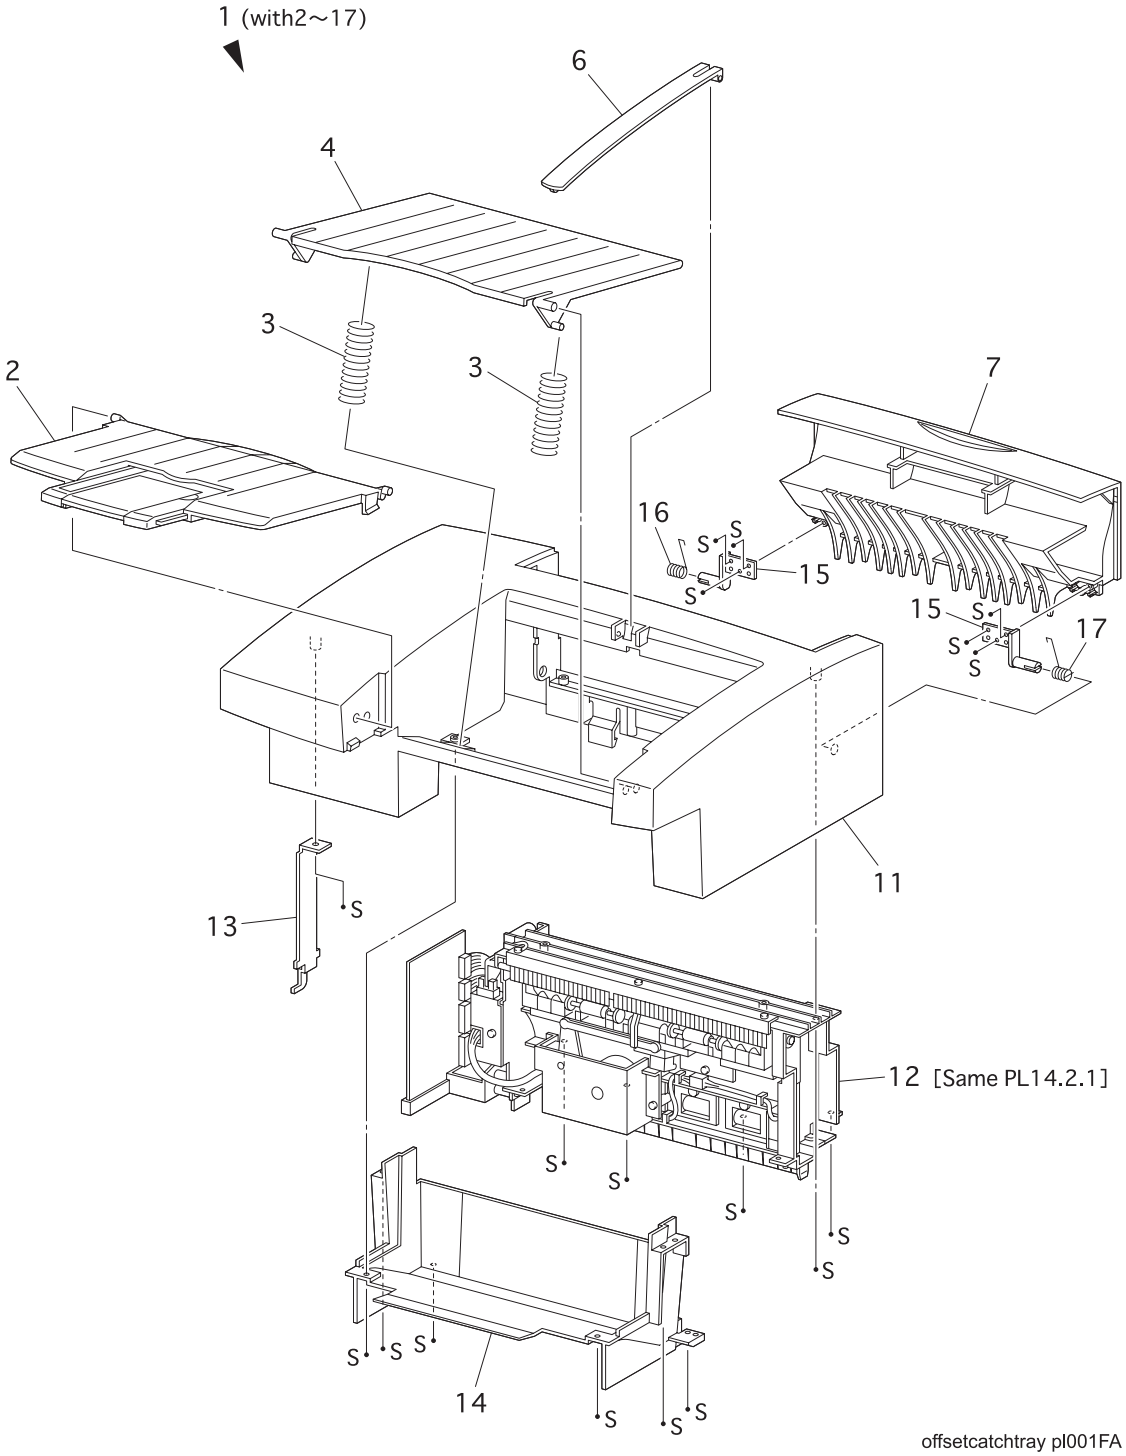

PL14.1 Offset Catch Tray I

ITEM	PART NAME	
1	---	OFFSET CATCH TRAY ASSY (with 2~17)
2	050K38631	TRAY EXIT ASSY
3	---	SPRING TRAY
4	050E89160	TRAY EXIT
5	---	
6	012E09551	LINK WEIGHT
7	802E02773	COVER REAR
8	---	
9	---	
10	---	
11	802E02755	COVER OCT
12	054K22380	CHUTE EXIT INNER ASSY [Same PL14.2.1]
13	---	HOOK COVER
14	---	COVER LOWER
15	---	HINGE COVER
16	---	SPRING COVER L
17	---	SPRING COVER R

PL14.2 Offset Catch Tray II

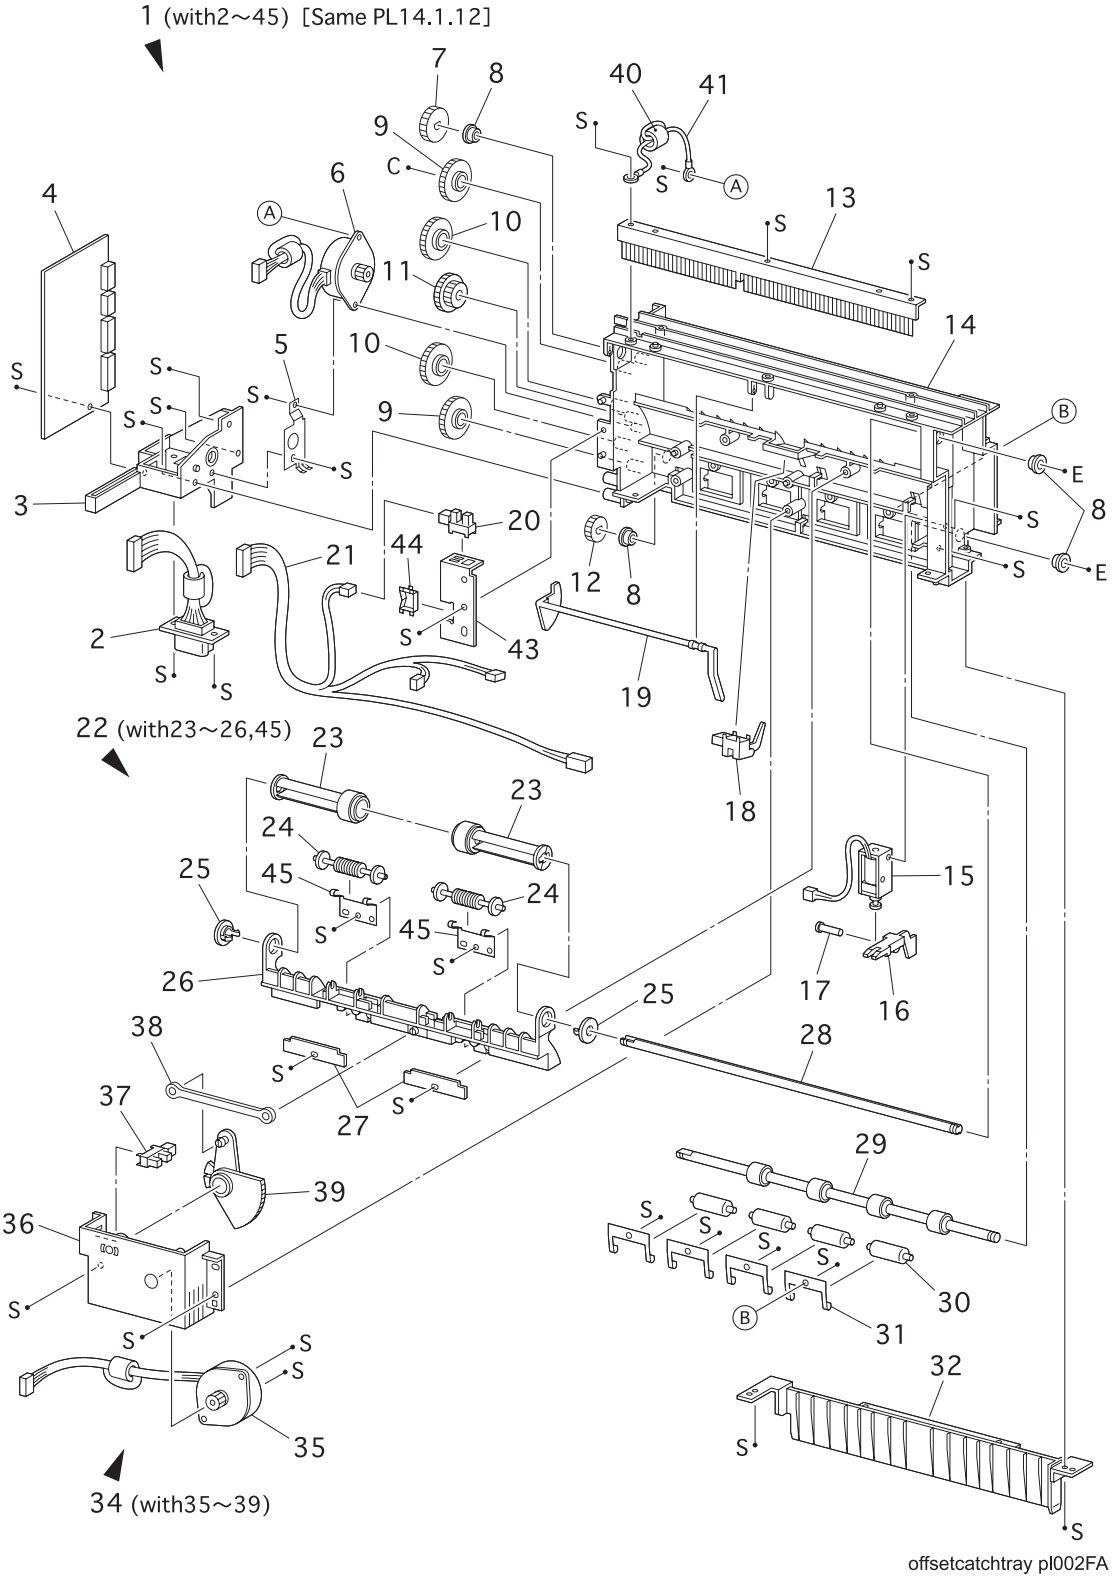

PL14.2 Offset Catch Tray II

ITEM	PART NAME	
1	054K22380	CHUTE EXIT INNER ASSY (with 2~45) [Same PL14.1.12]
2	---	HARNESS ASSY OCT UNIT (J202-J209)
3	---	HOLDER PWBA
4	160K88240	PWBA OCT
5	---	PLATE EARTH
6	127K28640	MOTOR DRIVE ASSY
7	---	GEAR EXIT 20
8	---	BEARING EXIT
9	---	GEAR 27
10	---	GEAR 26
11	---	GEAR 47W
12	---	GEAR EXIT
13	---	ELIMINATOR
14	---	HSG GEAR
15	121K20551	SOLENOID DIRECTION
16	011E09450	LEVER SOLENOID
17	---	PIN SOLENOID
18	130K84220	SENSOR ASSY EXIT OCT
19	120E17191	ACTUATOR FULL STACK
20	130E81970	SENSOR FULL STACK
21	---	HARNESS ASSY OCT SNR (J224-225,J226,J227,J228)
22	---	ROLL ASSY OFFSET (with 23~26,45)
23	---	ROLL ASSY EXIT
24	---	ROLL PINCH EXIT
25	---	BEARING OFFSET
26	---	GUIDE OCT
27	---	HOLDER OCT
28	---	SHAFT EXIT
29	---	ROLL ASSY MID OCT
30	---	ROLL PINCH OCT
31	---	SPRING PINCH MID
32	054E14431	CHUTE EXIT INNER
33	---	
34	802K05770	OFFSET ASSY (with 35~39)
35	---	MOTOR OFFSET ASSY
36	---	HSG OFFSET
37	130E81970	SENSOR OCT HOME
38	---	LEVER OFFSET
39	---	GEAR CORE
40	---	FERRITE CORE
41	---	WIRE ASSY OCT
42	---	
43	---	BRACKET SENSOR
44	---	EDGE SADDLE
45	---	SPRING PINCH EXIT